


DEW


INSTALLATION INSTRUCTIONS

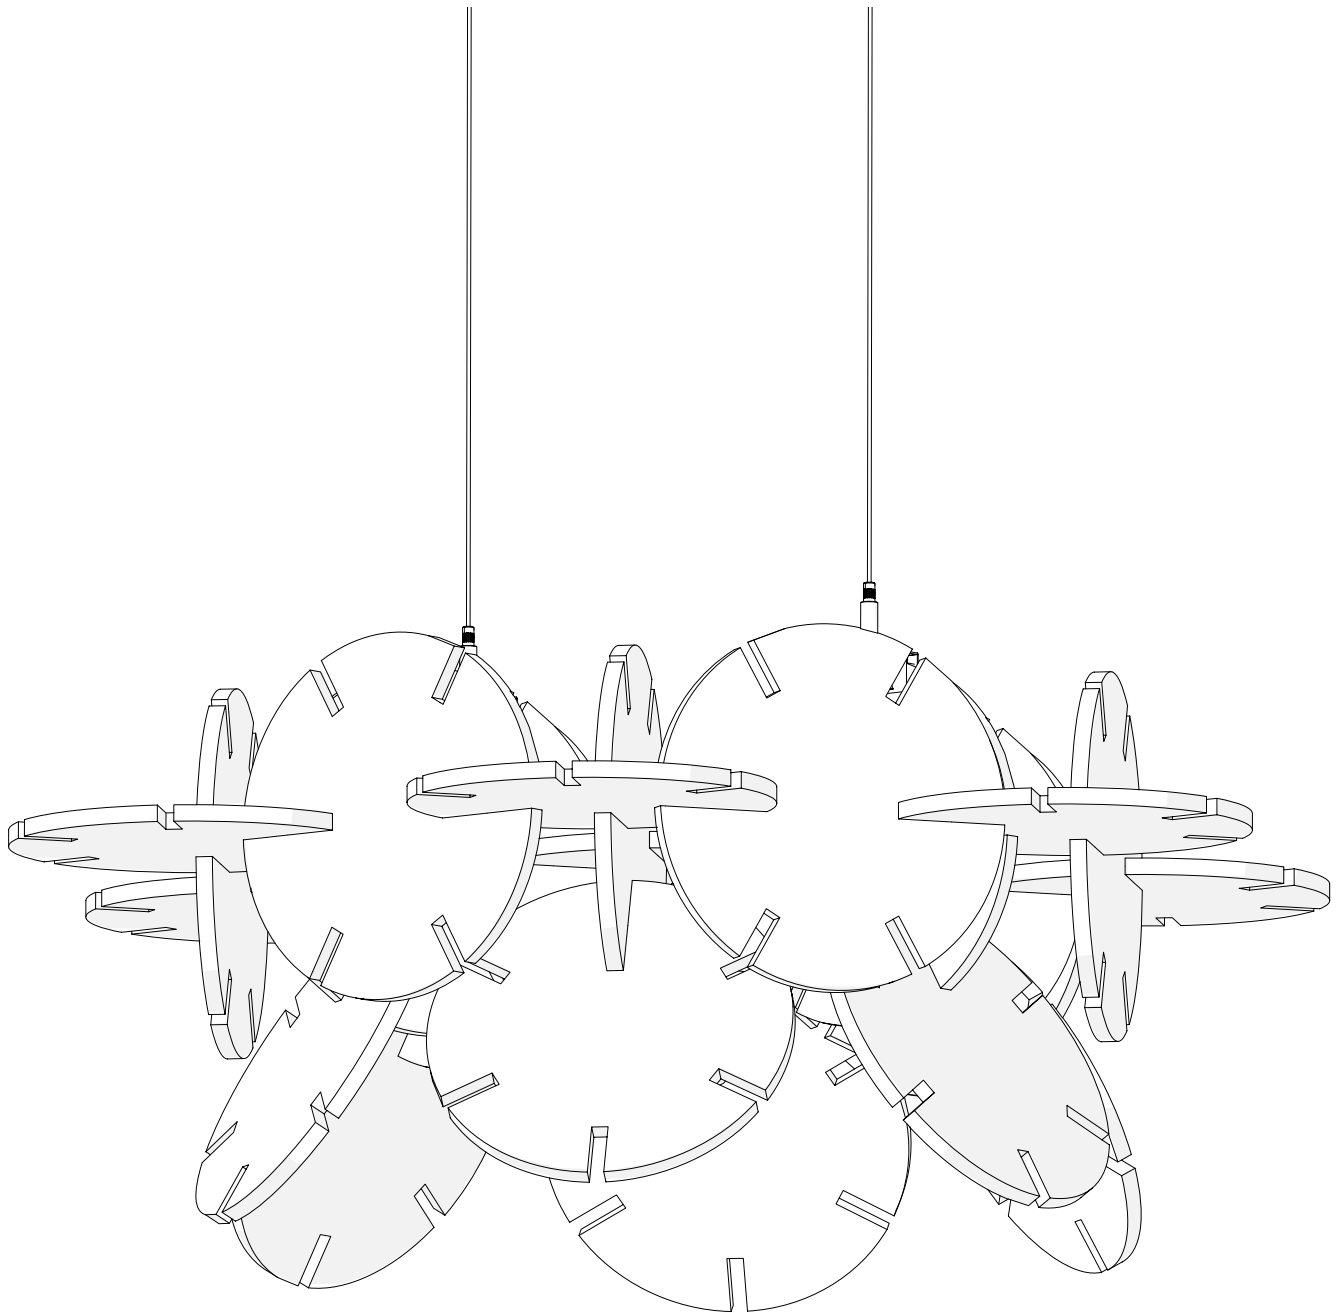

DEW: COMPONENTS AND HARDWARE

DEW droplet sizes and quantities will depend on which size variation of DEW you have selected for shipment:


DEW: Small

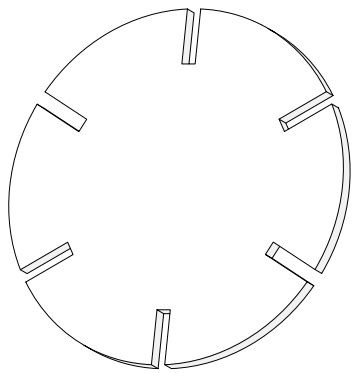


200mm
Droplet

x66


INCLUDED HARDWARE

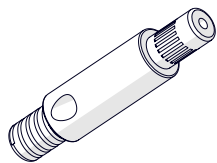

Grip lock x4

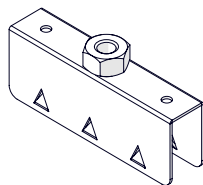


Saddle bracket x4

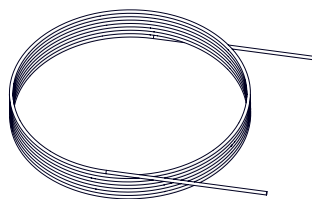

Aircraft Cable 6ft


DEW: Large

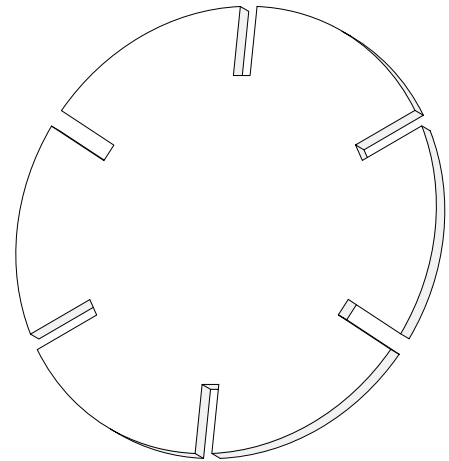


300mm
Droplet

x28


INCLUDED HARDWARE

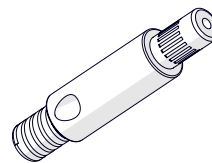

Grip lock x2

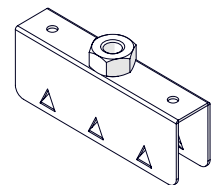



Saddle bracket x2

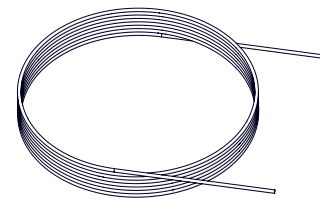



Aircraft Cable 3ft

DEW: INSTALLATION INSTRUCTIONS



Follow these steps to assemble DEW.

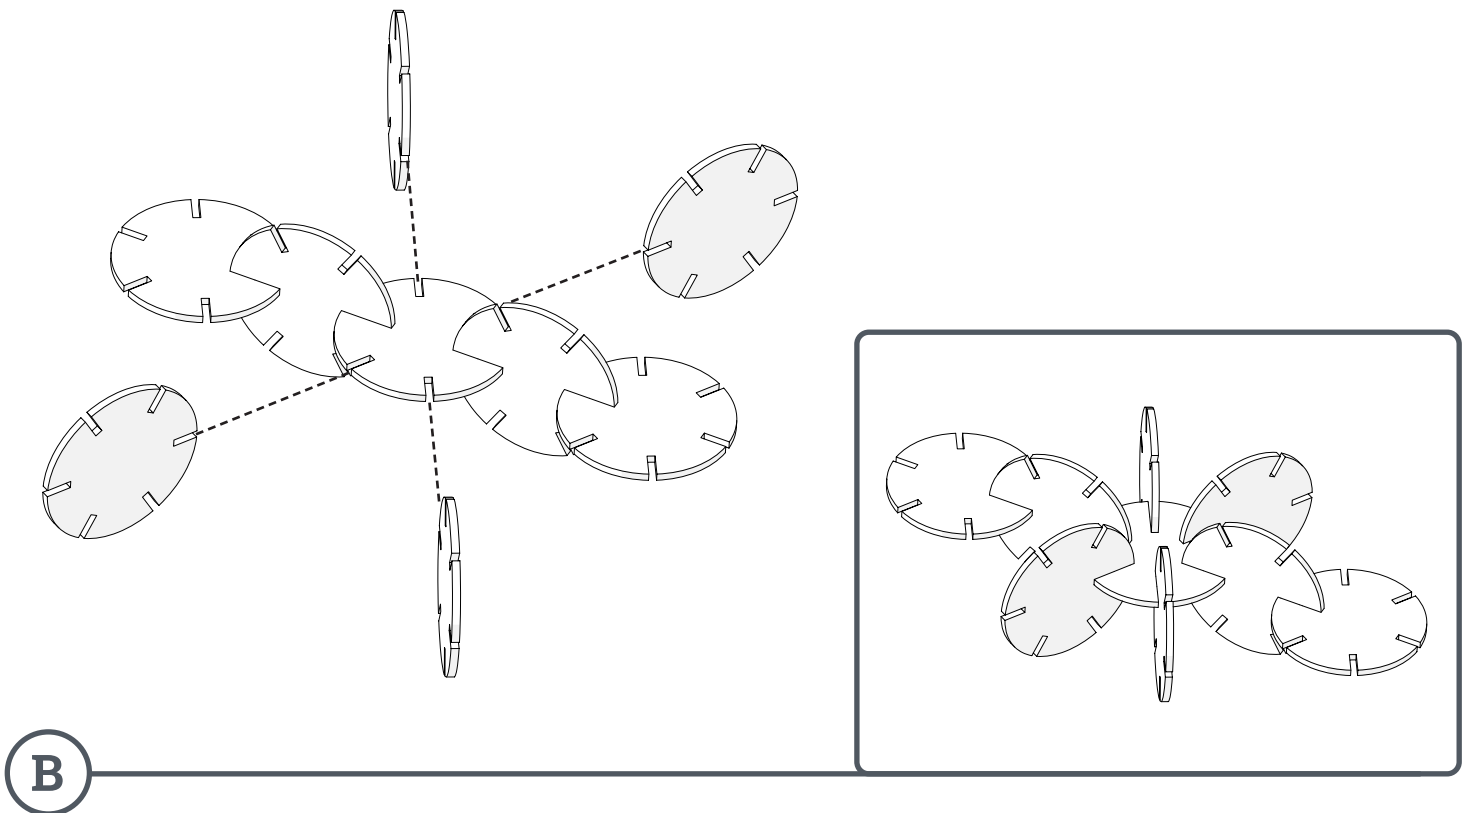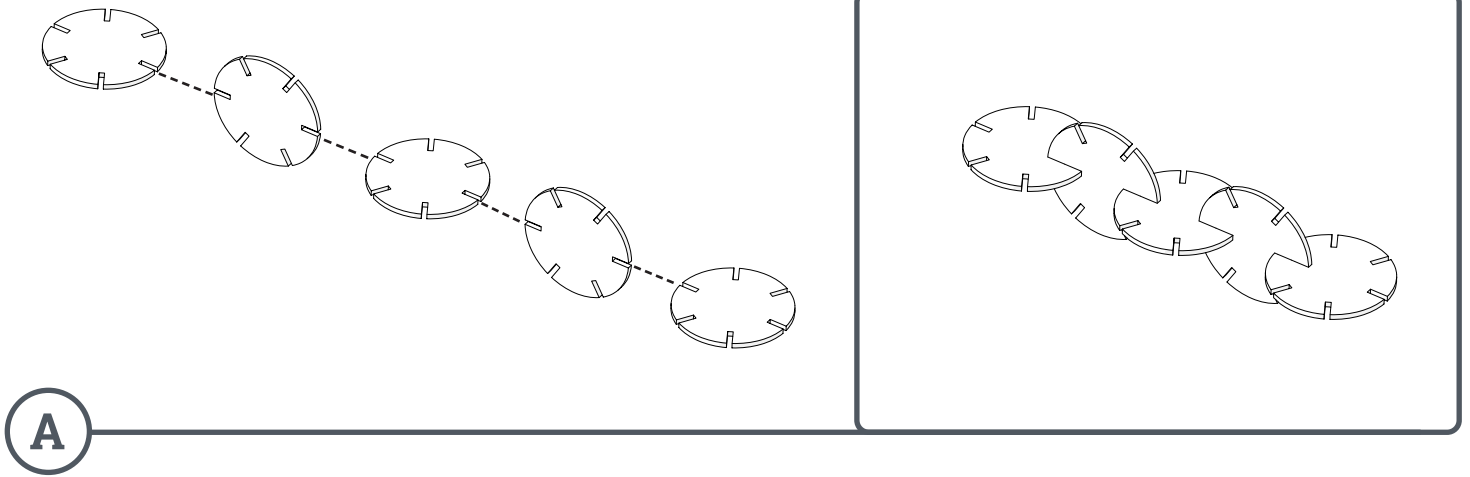

DEW: INSTALLATION INSTRUCTIONS

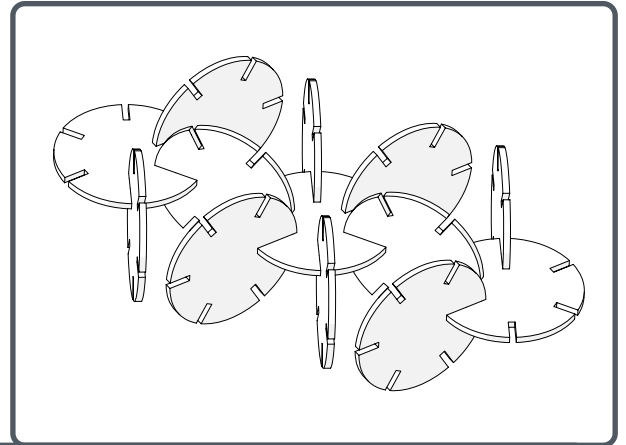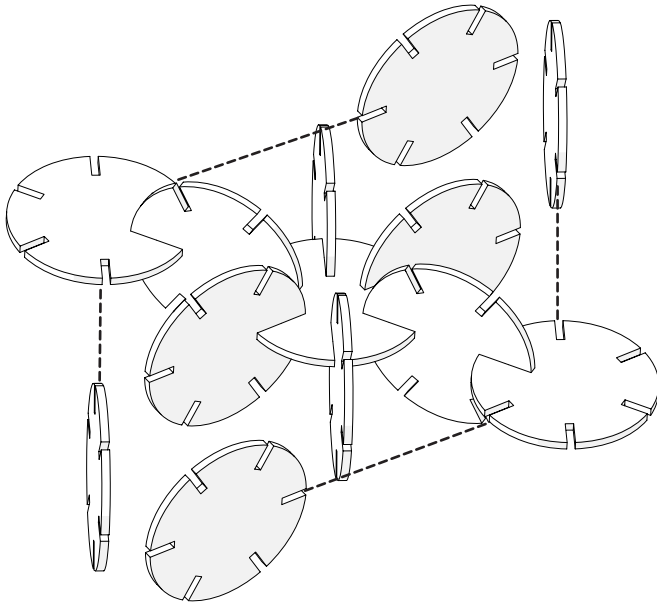


C

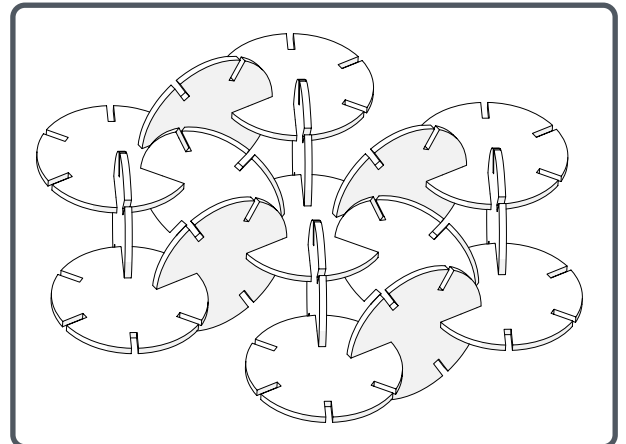
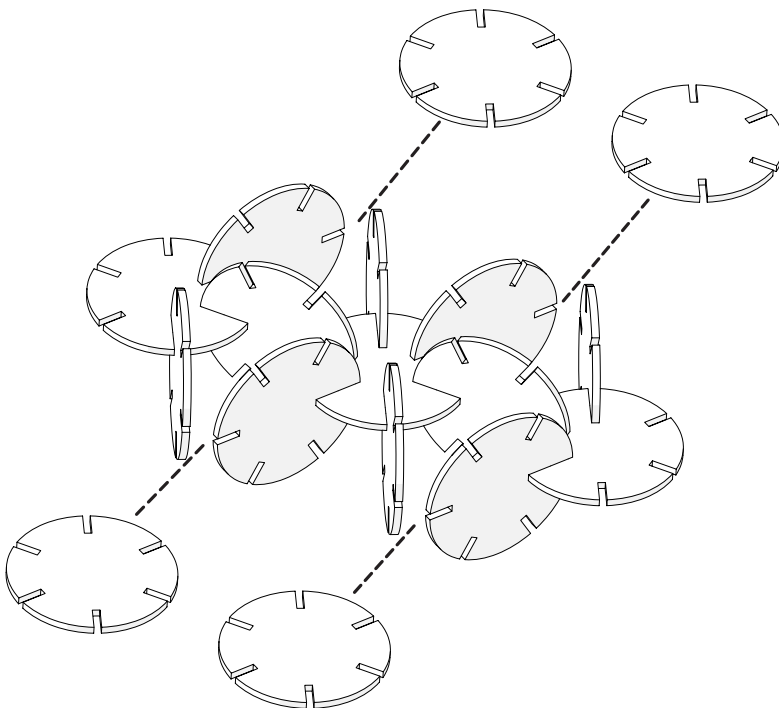


D


DEW: INSTALLATION INSTRUCTIONS

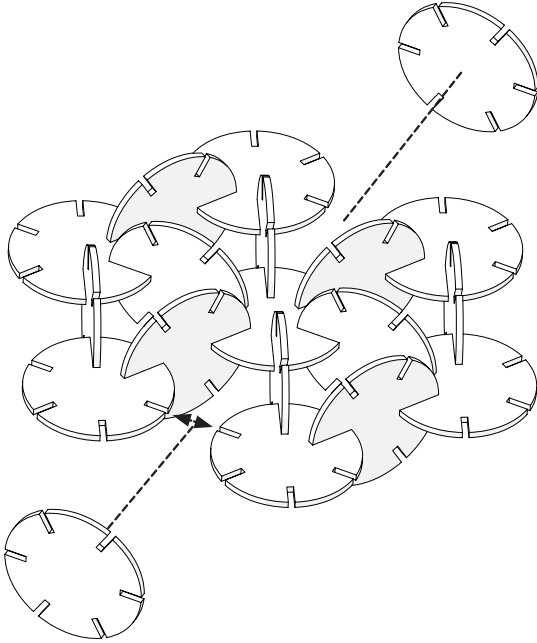

E

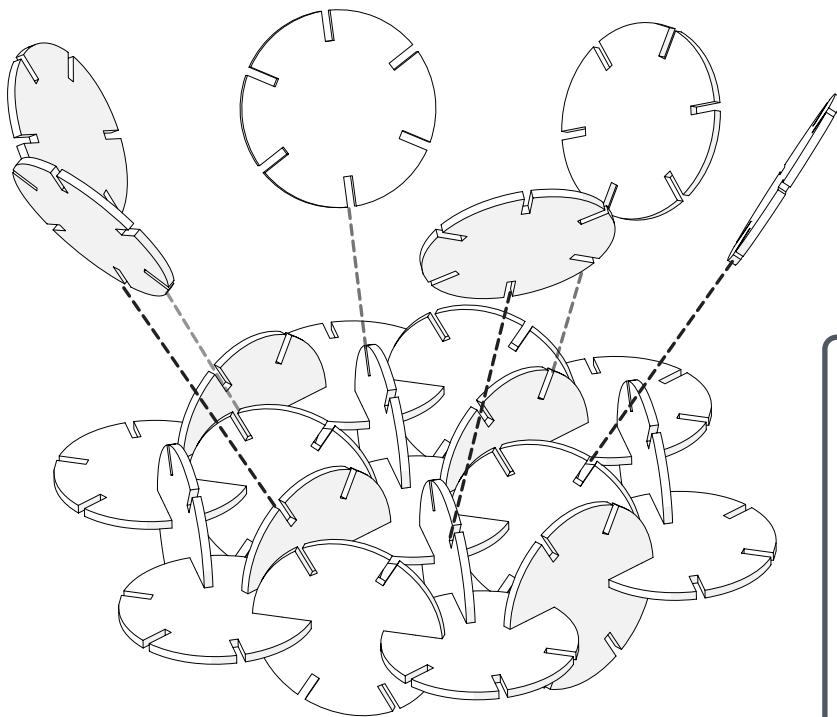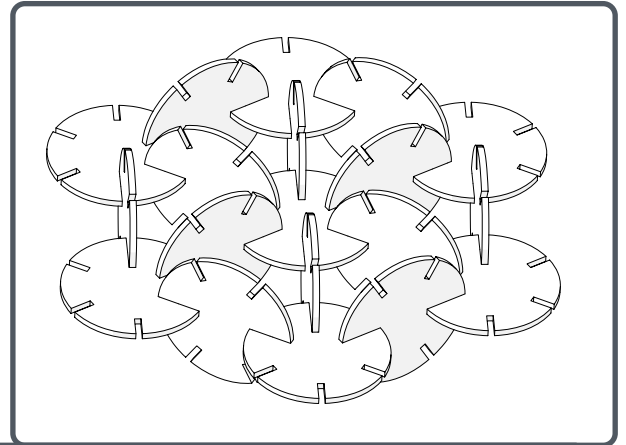


F

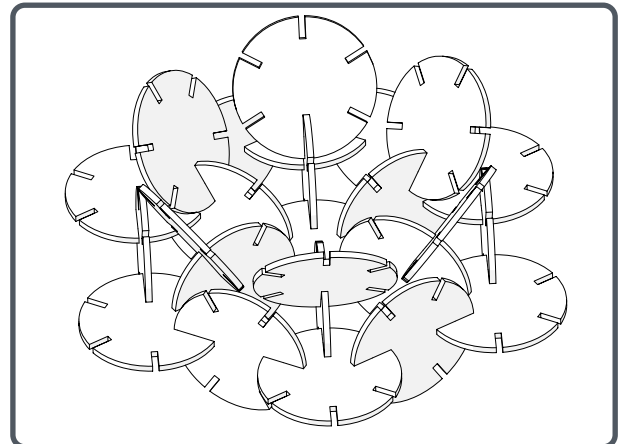


DEW: INSTALLATION INSTRUCTIONS


Assemble hardware as shown [x4].

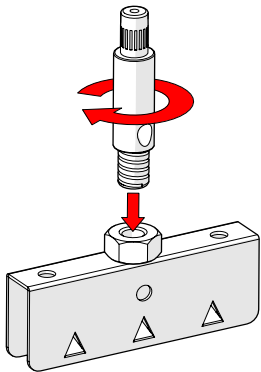


Screw the Grip Lock to the saddle bracket.

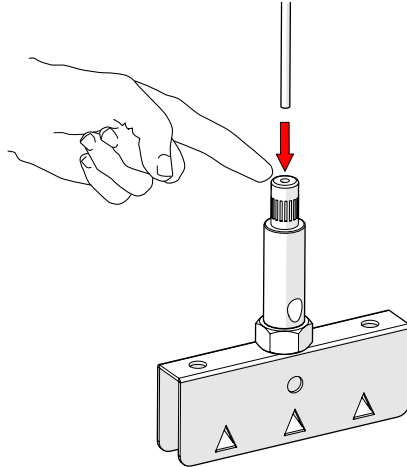

Press down on the plunger while inserting cable.

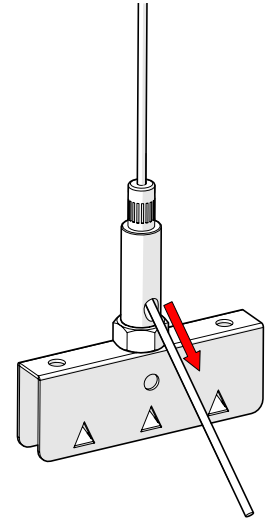


Thread cable through the side exit, and release the plunger to lock the cable in place.

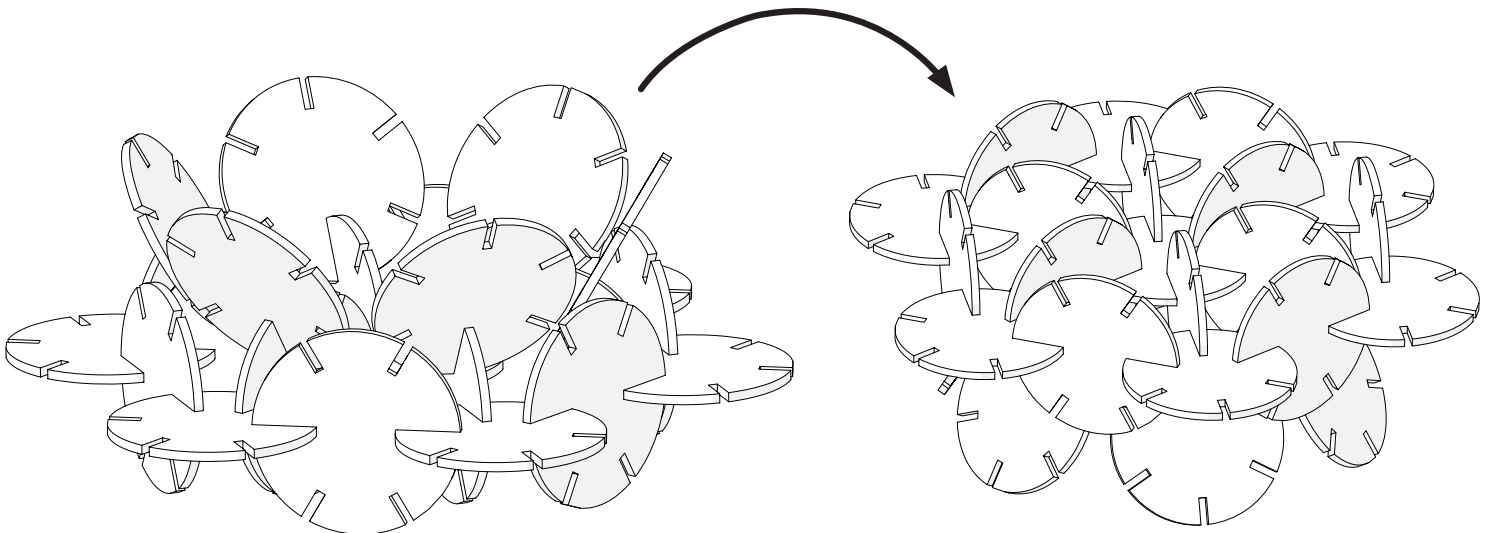


Flip the module over to continue with hardware installation,

DEW: INSTALLATION INSTRUCTIONS

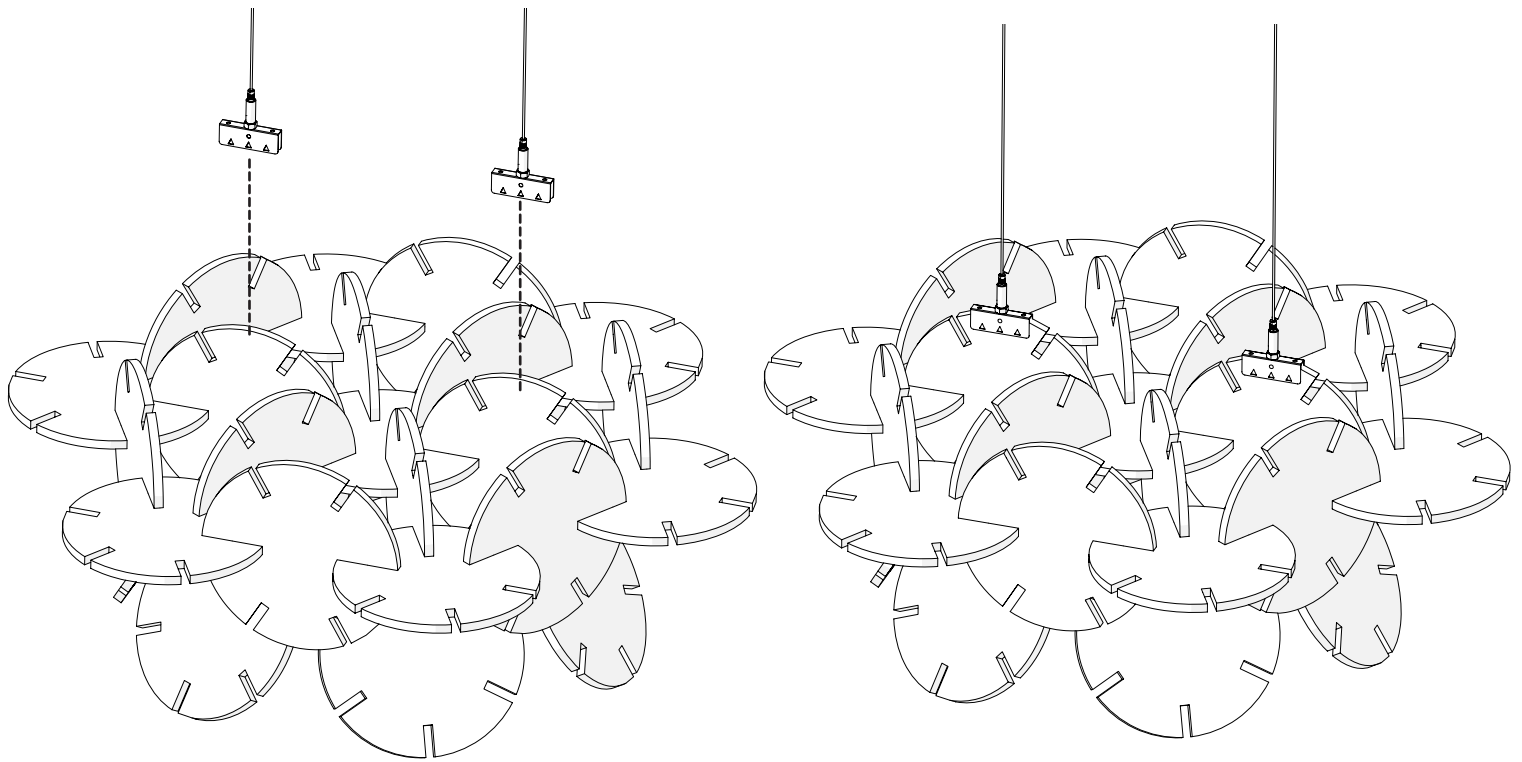

Press the spikes of the saddle brackets firmly into the tops of the center droplets, and hang DEW according to your preferred method.

DEW: INSTALLATION INSTRUCTIONS

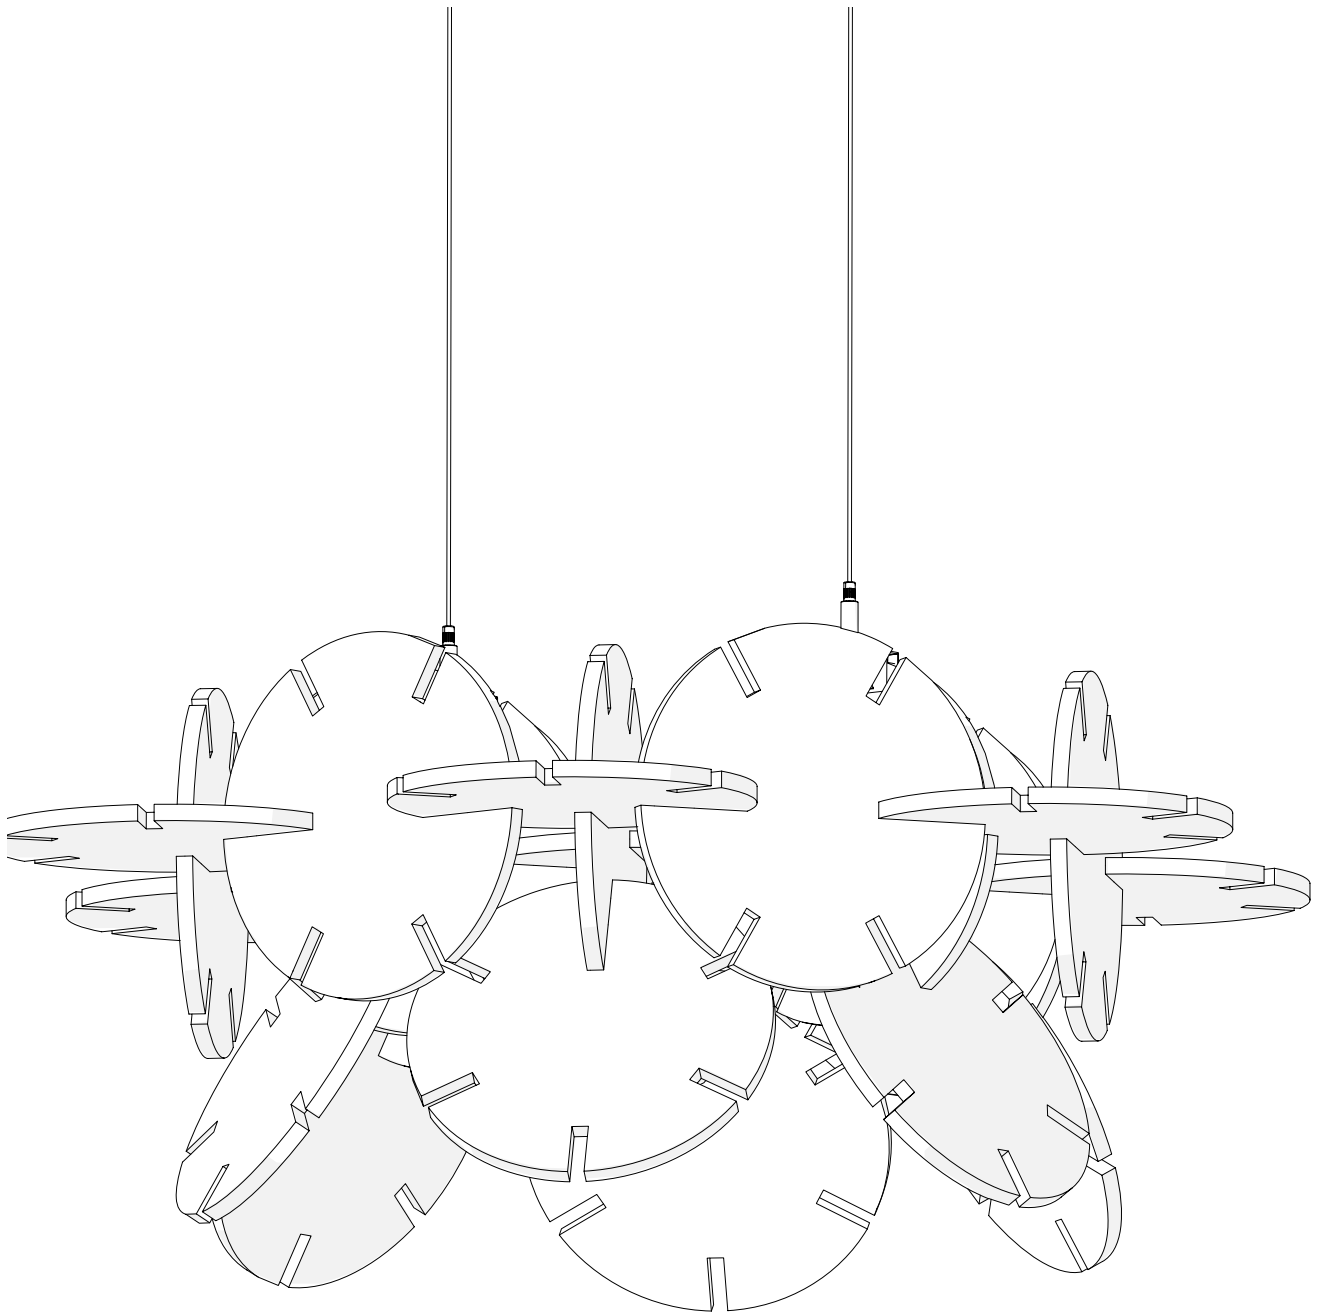

Installation Complete.