

HEX FLAT Installation

Acoustical Wall Tiles

These installation suggestions consist of a common process for HEX FLAT installation. Installers should rely upon their own professional experience and understanding of their unique requirements to ensure a successful install.

Tools Needed




Level



Carpet Glue



Box Cutter

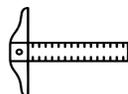

Straight Edge

Optional Tools




Paint




Paint Brush

*Recommended: Roberts 3095 Carpet Adhesive or Heavy duty Liquid Nail

Items Included

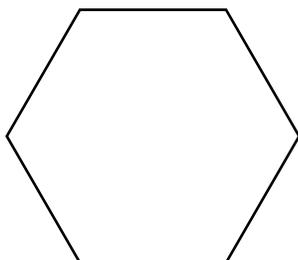


HEX Tiles

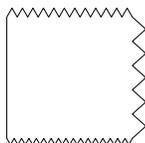

Notch Trowel (1/8" Notch)


1. Measure the length and height of the wall. Find center of the wall.

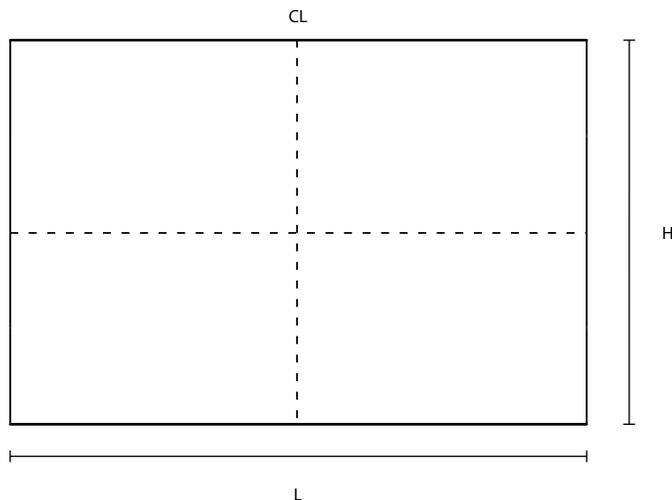


HEX FLAT Installation

Acoustical Wall Tiles


2. Lay down the HEX FLAT tiles on the ground.

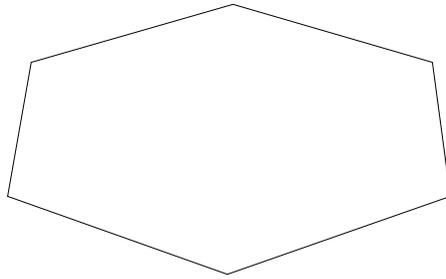

3. Use the given 1/8" side notch trowel to place the carpet glue to one HEX FLAT tile at a time. Use the notch trowel to apply the construction adhesive to the back of each tile one at a time. Adhesive has 20-25 minutes of drying time.

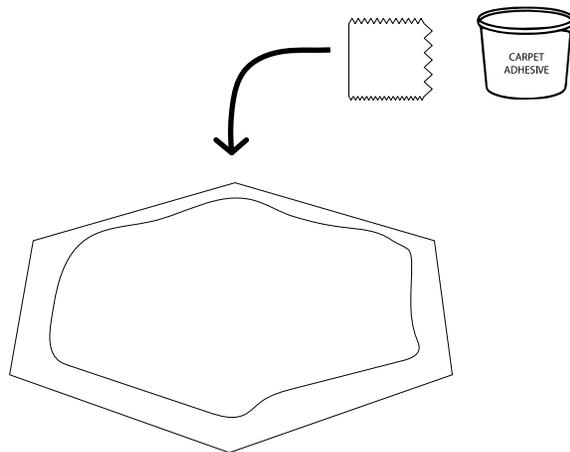

4. Position the tile on the wall.


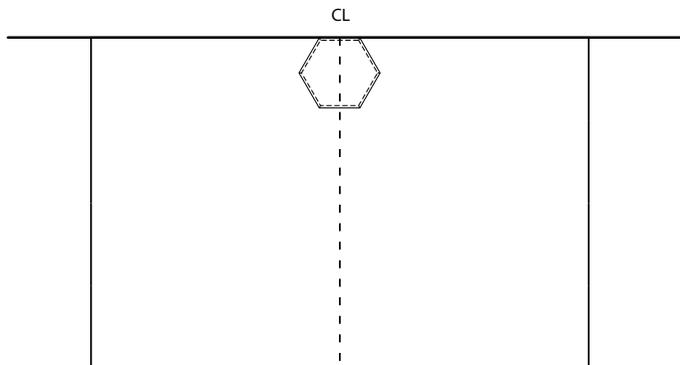


HEX FLAT Installation




Acoustical Wall Tiles

5. Use a box cutter and metal ruler to cut off the excess material to fit on the wall.



Tip for clean edges: Use smooth continuous motion to cut through half the thickness of the material; using the edge of the ruler as your guide. Go over the same line again to complete the cut.

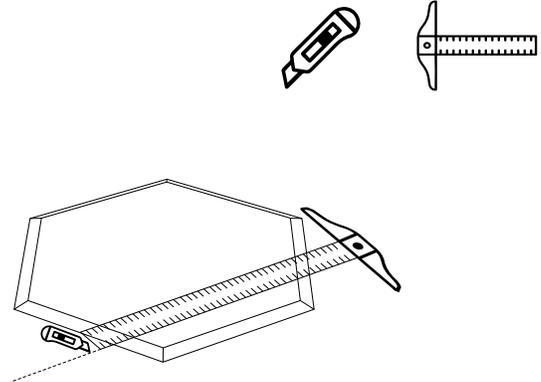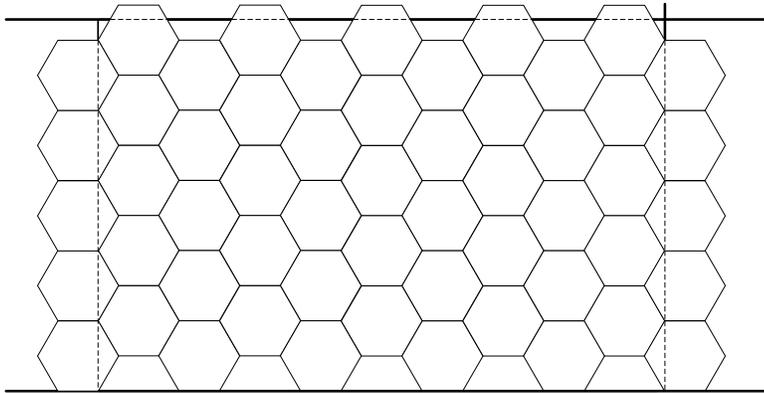

6. Follow instructions in step #5. for cuts around outlets, etc.

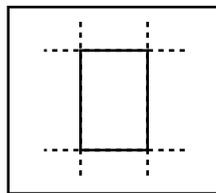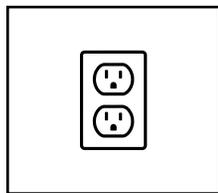

Tip: Matching paint color can be used on the wall around outlets or anywhere where HEX FLAT tiles are not fitting snugly to each other. This can happen when doing complex cuts or when your wall has imperfections or is not at a perfect 90 degree angle. This small trick will stop any white wall peeking through.

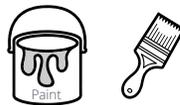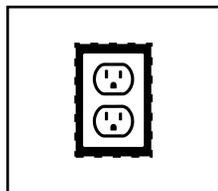

HEX FLAT Installation

Acoustical Wall Tiles

7. HEX FLAT wall is complete.

